


POWER SPECIFICATION

Do not power both DC input options at the same time. This may cause damage to the vehicle dock or the ALGIZ 10X.

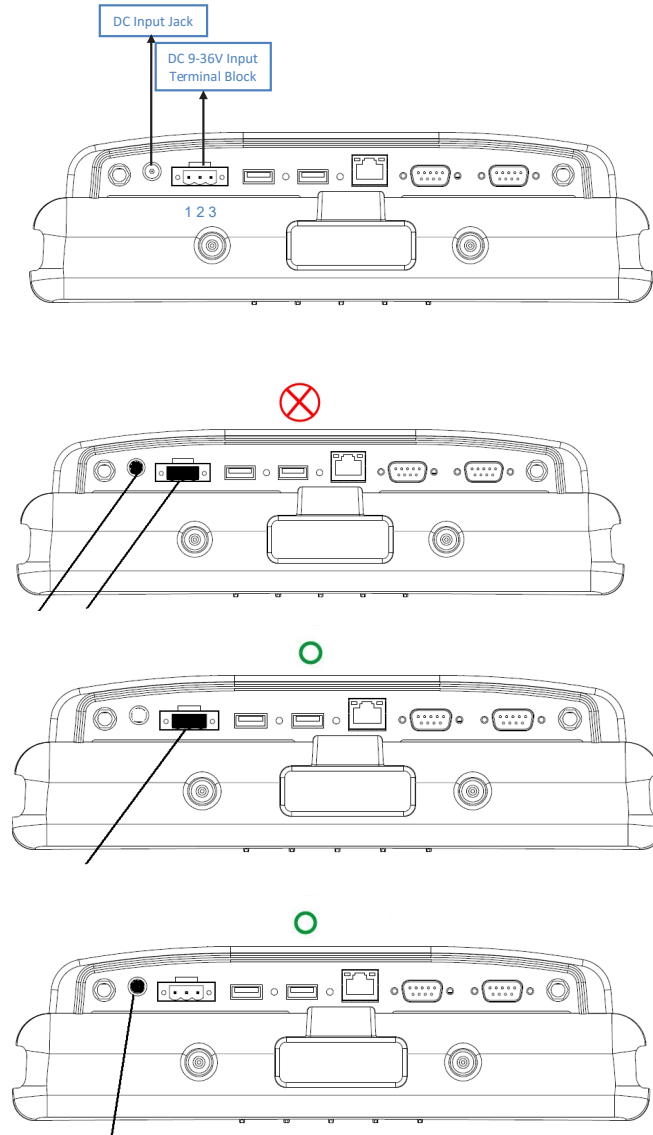


ALGIZ 10X

VEHICLE DOCK QUICK START GUIDE




INSERT ALGIZ 10X INTO THE VEHICLE DOCK

1. Insert the ALGIZ 10X in the vehicle dock as shown in the picture.

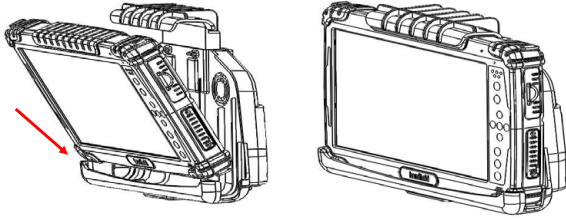


2. Push down the top latch to lock the unit in place.

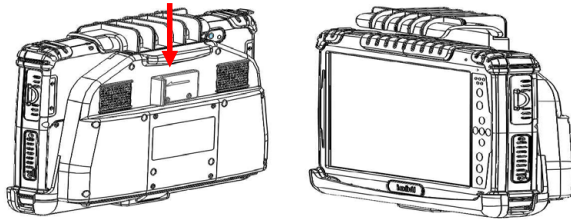


REMOVE ALGIZ 10X FROM THE VEHICLE DOCK


1. Pull the latch on the back to release the ALGIZ 10X.

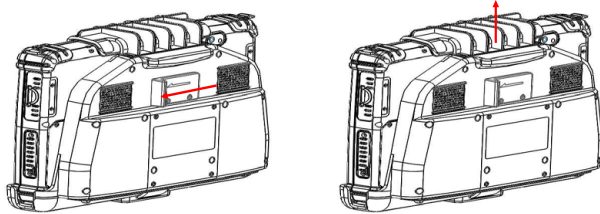

2. Remove the ALGIZ 10X carefully.

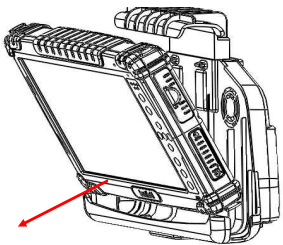


SPECIFICATION

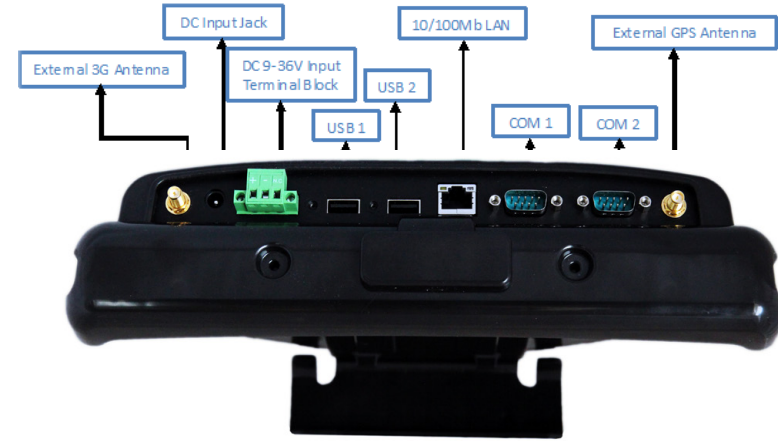

Mount: VESA 75. Screw hole: M3x5mm

POWER INPUT

 There are two options to connect a power source. Both options accept a voltage range between 9~36V.



Pin	Signal Name	Pin	Signal Name
1	DCD	2	SRD
3	STD	4	DTR
5	GND	6	NDSR
7	NRTS	8	NCTS
9	NRJ+12V		

CAUTION!

Use only included power cord or ALGIZ 10X AC/DC adapter. Other power cords or adapters may cause damage to the vehicle dock or the ALGIZ 10X.