


RS60 FOUR SLOT CHARGING STATION

QUICK START GUIDE

Version 1.0


handheld

 OVERVIEW

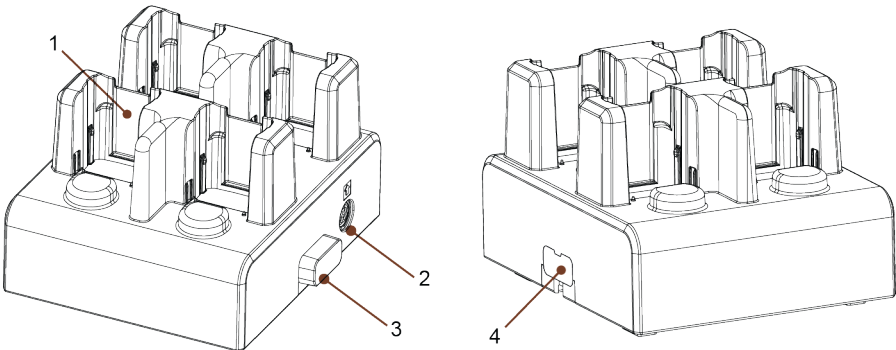


- 1. RS60 charging slot
- 2. Power receptacle
- 3. Cross connection plug with cover
- 4. Cross connection connector with cover

 STANDARD

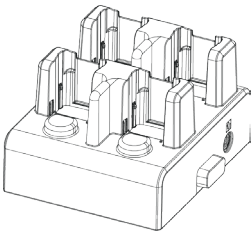


Four slot charging station
(HHR01-1015)

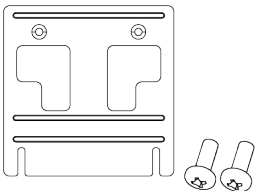 

Cross connection bracket & screws

 
OPTIONAL

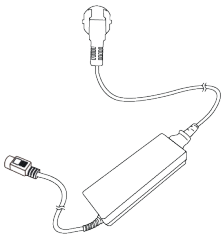

12V 7A adapter & power cable
(HHR1005+C13 cable)

SUPPLY POWER

 - 1. Assemble power adapter and power cable.
- 2. Referring to below figure, connect power cable into power receptacle of the station as the arrow marks of the cable is facing up (facing arrow mark on the station).
- 3. Plug the adapter into a power outlet.

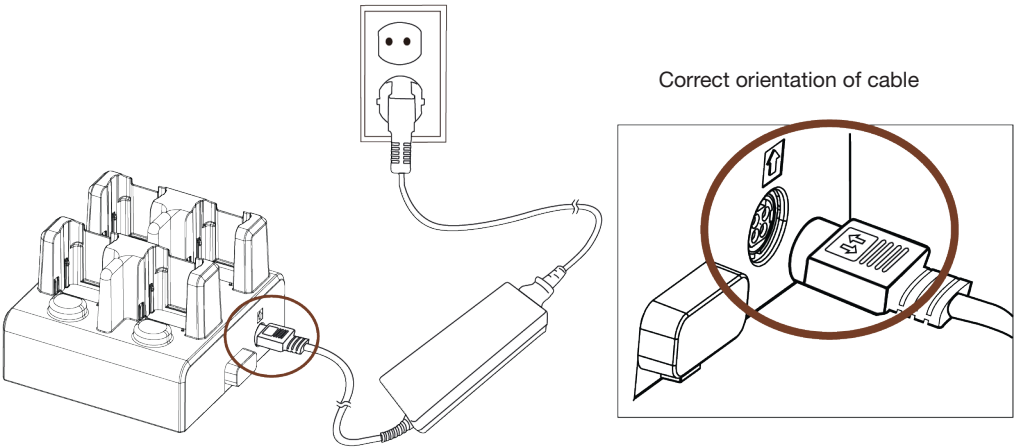


Correct orientation of cable

CHARGING RS60

HHRS01-1015 can charge RS60 with the trigger mounted only, as the charging via HHRS01-1015 works through the charge connector on the trigger. (Cannot charge RS60 only or RS60 with sled mounted.) The connectors are on both sides of the trigger.

 
1. Insert the RS60 into the slot, scanner facing down.
2. Push the device down until the LED indicator of device lights up.
(Red - Charging / Green - Fully Charged)

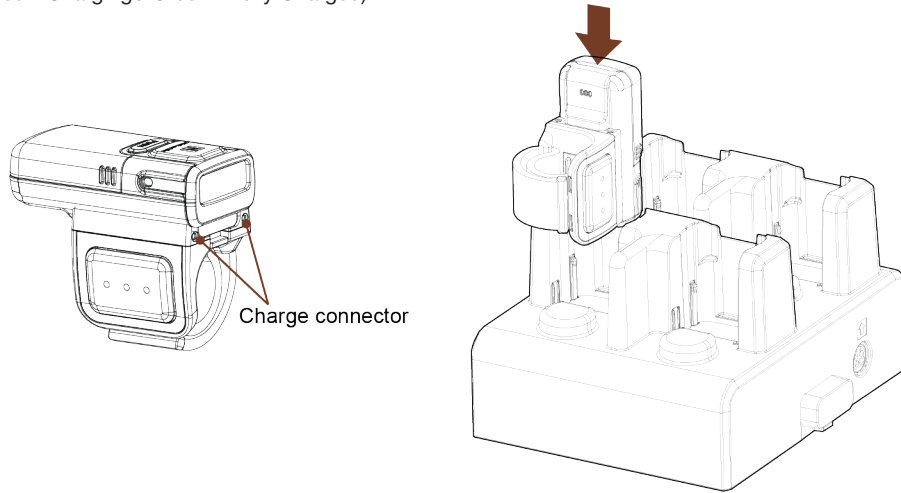


CROSS CONNECTED CHARGING STATION 1

HHRS01-1015 can be assembled up to 5 pcs for cross connections (HHRS01-1025 cross connection is available). Use enclosed bracket and screws. You need a screwdriver.

 1. Take off the covers of cross connection plug and connector. Pull out the hole on the bottom side of the cover.

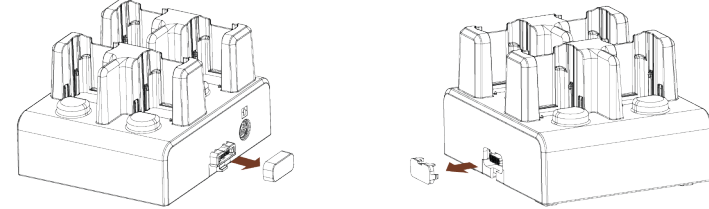

 2. Put the cross connection plug into the connector.

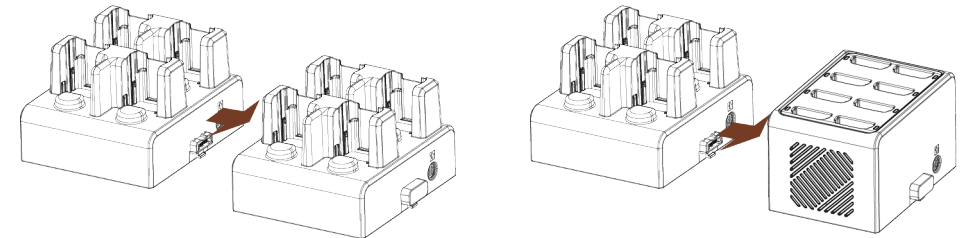


HHRS01-1015 + HHRS01-1015


HHRS01-1015 + HHRS01-1025

CROSS CONNECTED CHARGING STATION 2

 3. Turn the station upside down and insert the bracket referring to below figure.

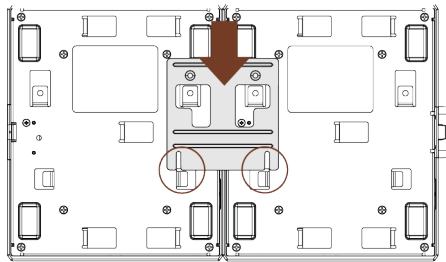

 4. Align the bracket's screw holes with the screw holes of the station and tighten the screws using a screwdriver to fix the stations in place.

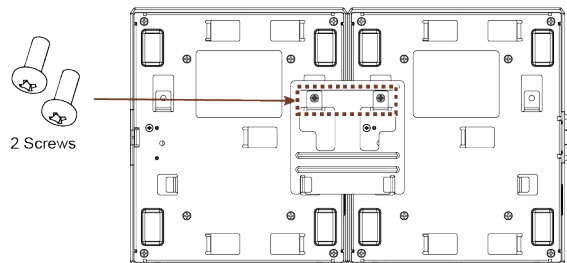


CROSS CONNECTED CHARGING STATION 3


5. If you want to connect more, repeat steps 1 ~ 4.

You can connect up to 5 pcs of cradles in one type only (HHRS01-1015 only) or two different types (HHRS01-1015 & HHRS01-1025).

 Power will be provided to all connected stations when the adapter is connected to the last station.

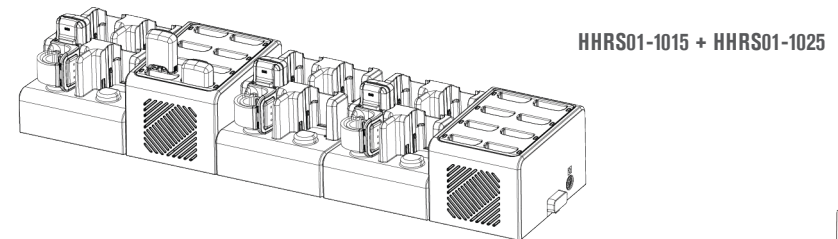

HHRS01-1015 + HHRS01-1025

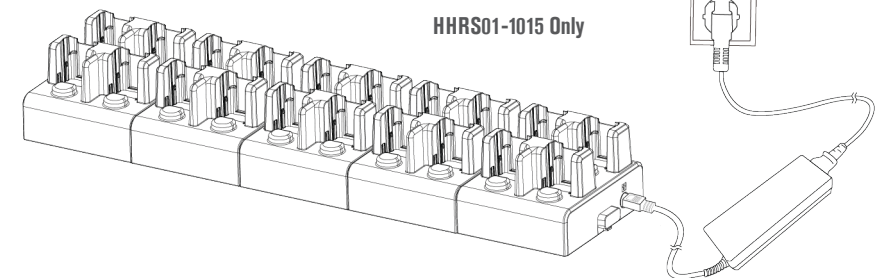 

HHRS01-1015 Only